

# FIBER END CLEANING PEN

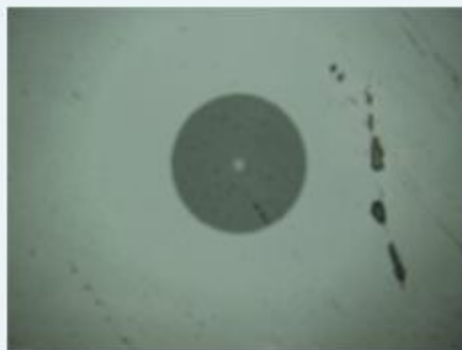
Clean APC and UPC connectors



# Why clean?

Precise cleaning, simple operation


The results are much better than traditional cotton swab cleaning sticks



Picture 1 before pollution



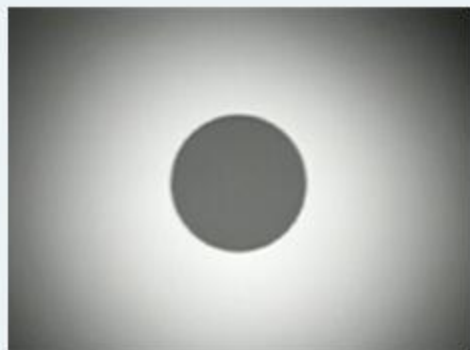Picture 2 before pollution



After cleaning

# PRODUCT INFORMATION

Comfortable design, precise cleaning,  
Simple operation, low cost, service life more than **800** times



## PRODUCT PARAMETER

Product Name: Fiber end cleaning pen

Product material: Antistatic resin

Cleaning specifications: 1.25 MMMU/LC  
2. 5MM FC/SC/ST

Product standard: Comply with EU/95/2002/EC

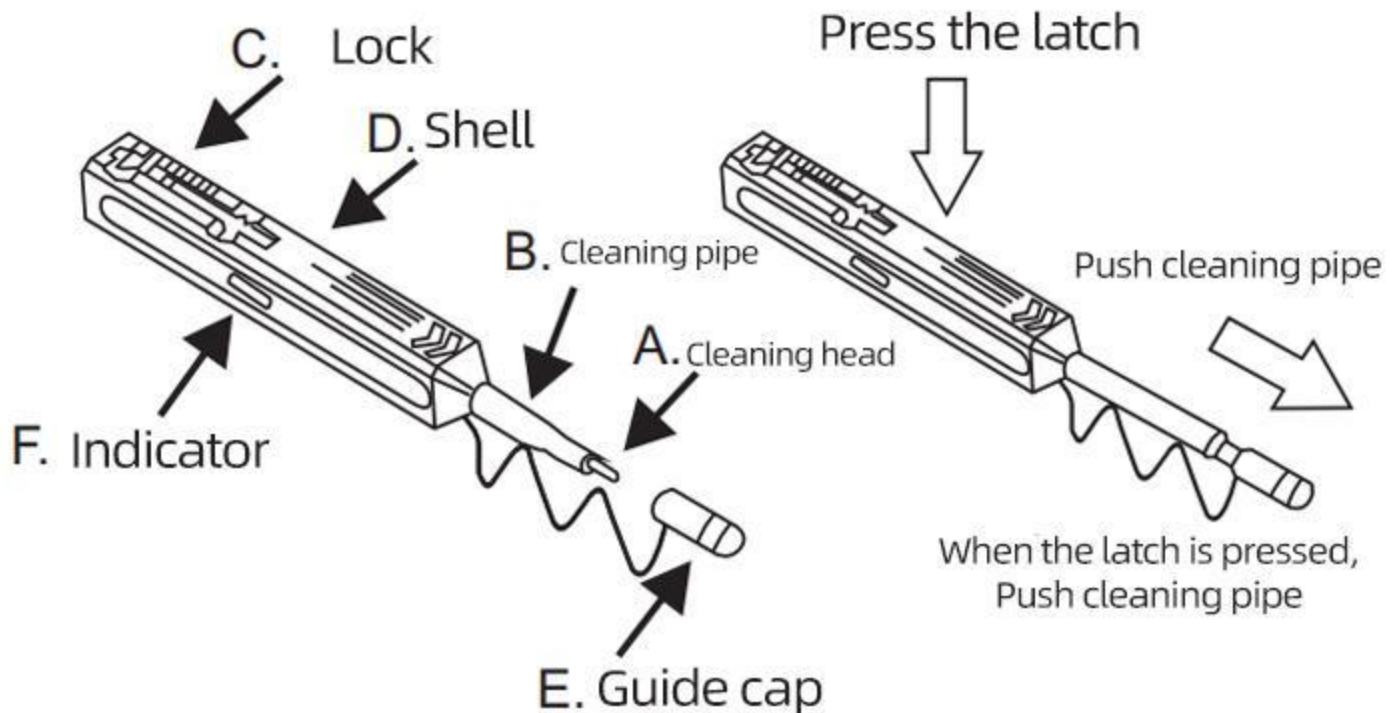
Scope of cleaning: 17.5 M \* 17.5 M

Length: 172M

Extension length: 252M, the top can be adjusted  
from 40M to 80M, depending  
on the cleaning depth position.


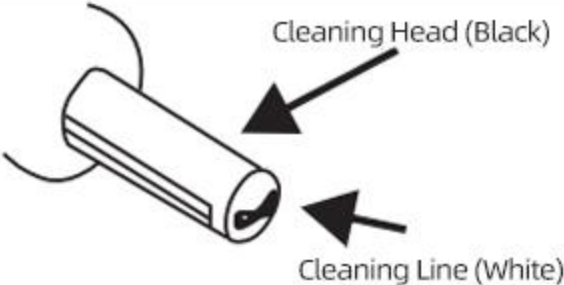



# PRODUCT SCULPTURE

---



Standard mode

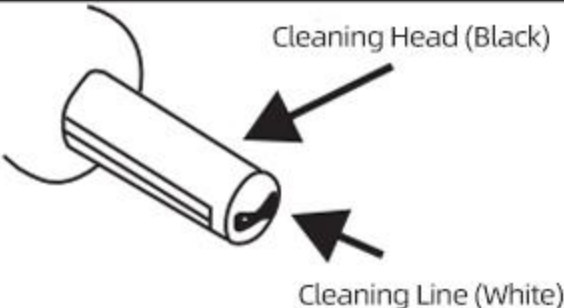Prolonged mode







	Indication chart	Clean pipe port diagram
Full		
Less		
Empty		

## Clean pipe port modes


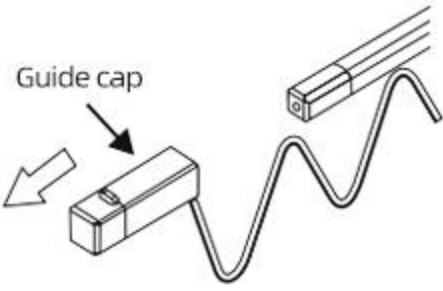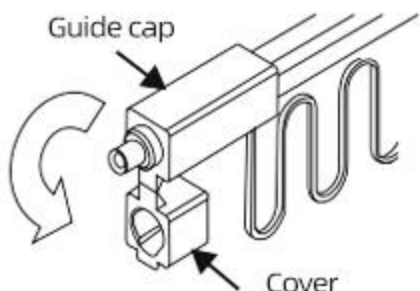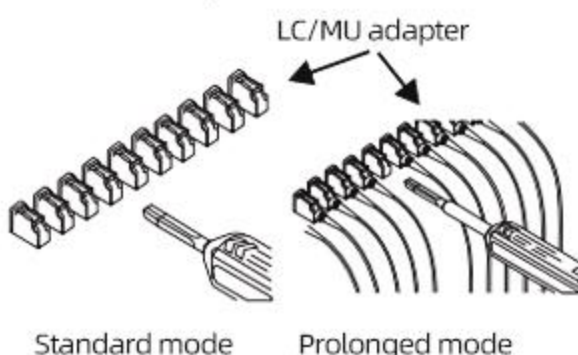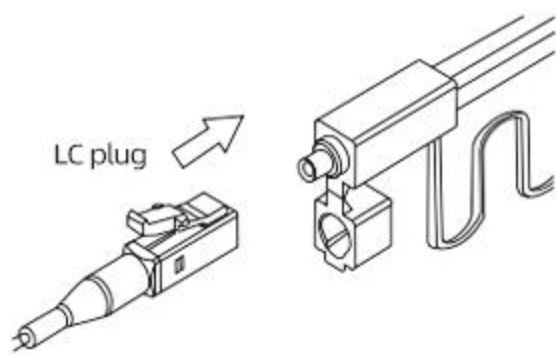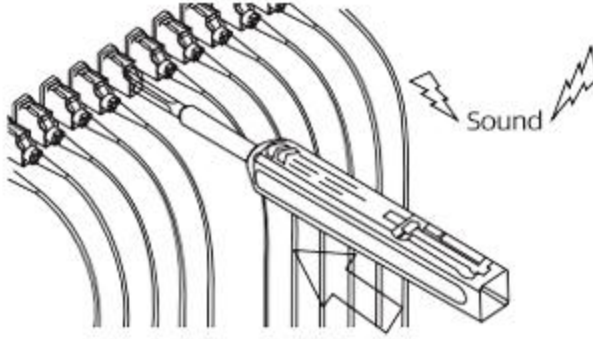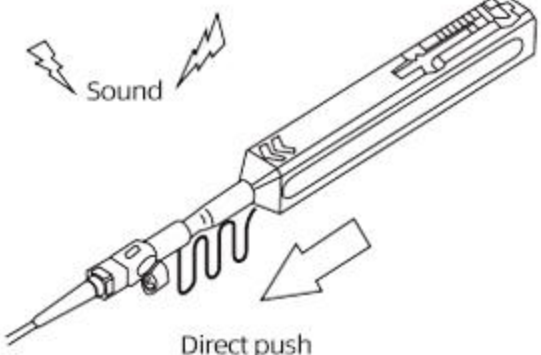
# Application description

Optical fiber cleaning pen is a high performance, high efficiency suitable for optical fiber adapter head Tools for cleaning. Please read the instructions carefully before using this product.

<p>1. Remove the guide cover from the product</p>  <p>Guide cap</p>	<p>1. Open the guide cover</p>  <p>Guide cap</p> <p>Cover</p>
<p>2. Insert the cleaning header into the LCM adapter</p>  <p>LC/MU adapter</p> <p>Standard mode</p> <p>Prolonged mode</p>	<p>2. Insert the LC/MU adapter head into the guide cover</p>  <p>LC plug</p> <p>Cover</p>
<p>3. Push the shell to start cleaning the end of the connector. "Click" indicates the end of the cleaning process. Cover the guide cover after use.</p>  <p>Sound</p>	<p>3. Push the shell to start cleaning the end of the connector. "Click" indicates the end of the cleaning process. Cover the guide cover after use.</p>  <p>Sound</p> <p>Direct push</p>


- When inserting the adapter, be careful to align the adapter and do not tilt the fiber cleaning pen.
- When inserting, do not use excessive force; otherwise, the adapter head and the fiber cleaning pen will be damaged.
- If the push case is blocked, remove the adapter head from the fiber cleaning pen and check if there is any large debris affecting the cleaning process.
- When inserting the guide cap, align the guide cap and do not tilt the fiber cleaning pen.

# FIBER END CLEANING PEN

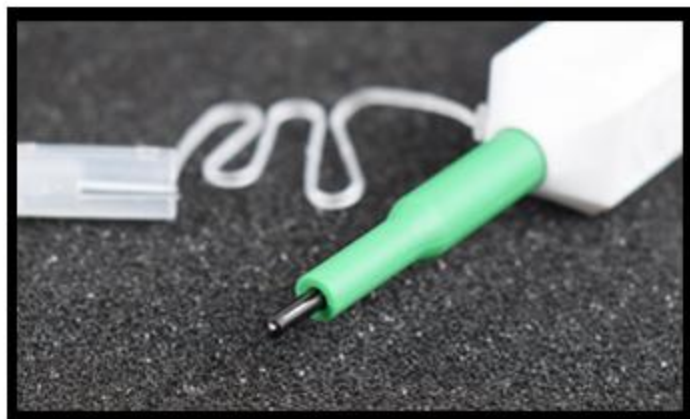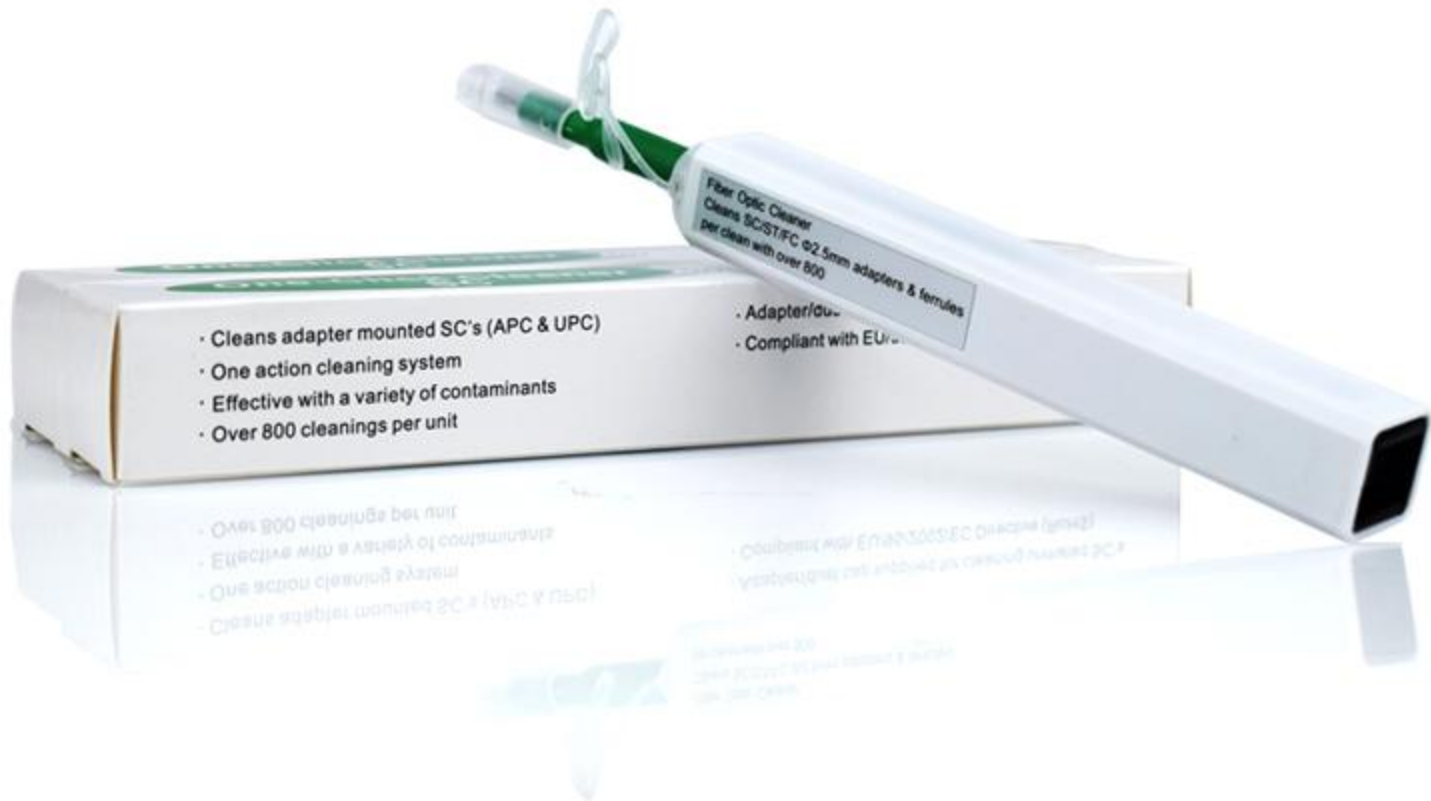
REAL PRODUCT DISPLAY

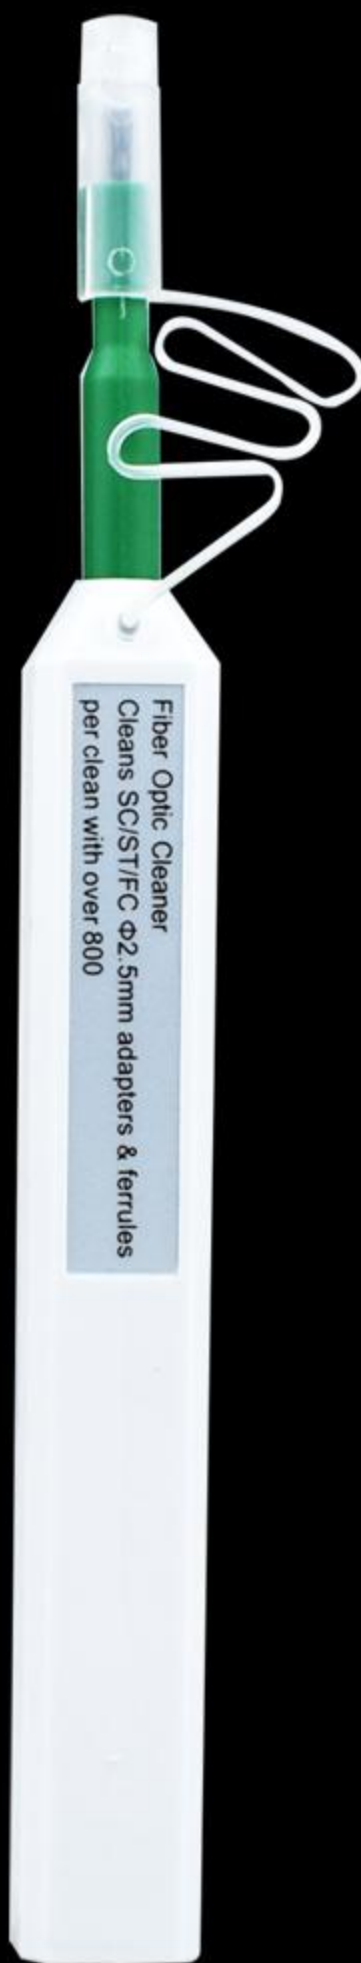
2.5MM FC/SC/ST














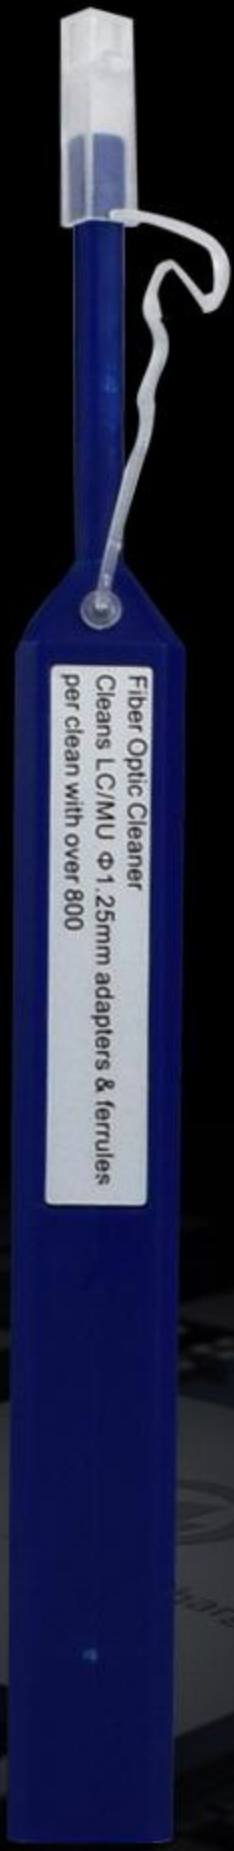1.25MM LC/MU







Fiber Optic Cleaner  
Cleans LC/MU  $\Phi$  1.25mm adapters & ferrules  
per clean with over 800





Fiber Optic Cleaner  
Cleans LC/MU & 1.25mm adapters & ferrules  
per clean with over 800

• One action of  
• Effect

ants  
EC Directive (RoHS)

OPTIC FIBER CLEANER

2.5MM  
FC/SC/ST

Smart Cleaner

Smart Cleaner

- One action cleaning system
- Effective with a variety of contaminants
- Compliant with EU/95/2002/EC Directive (RoHS)

Fiber Optic Cleaner  
Cleans LC/MU  $\phi$ 1.25mm adapters & ferrules  
Can clean with over 800

<b>Number</b>	<b>Name of parts</b>	<b>Function</b>
A	Cleaning head	Guide the cleaning wire to the end of the optical adapter
B	Cleaning pipe	Guide cleaner to end of optical adapter
C	Lock	Press the button to lengthen or shorten the cleaning tube
D	The shell	Push the housing clean adapter head
E	Guide cap	As a dust shield or cleaning head adapter head
F	Indicating cap	Indicates the remaining amount of cleaning line